


## Steps of how to setting gateway on Computer

Thank you very much for using Wardmay IP Camera. When you need to login IE to check the IP Cameras, please follow below steps to setting, thanks! Please add IP Address **192.168.0.1** and **192.168.1.1** on computer.

Note: Please insure your computer or laptop is online. Follow below steps to finish setting:

1. Find the sign in the lower right corner of the computer screen, click the left mouse button.

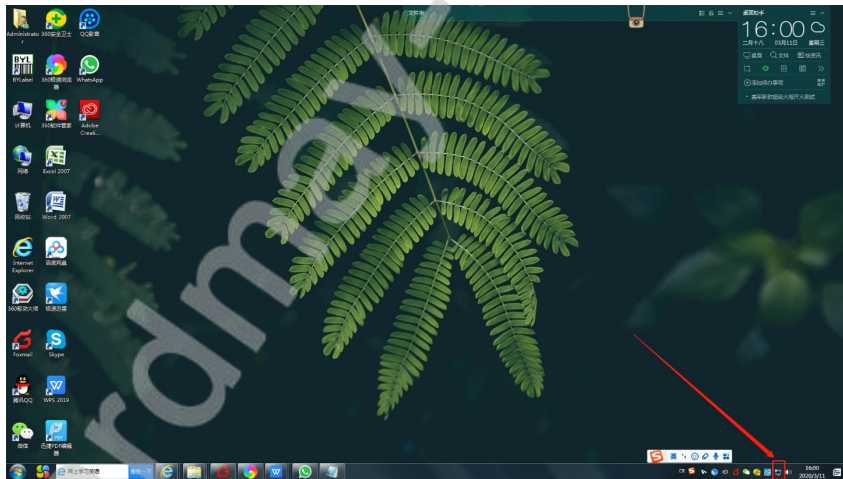


2. Click 'Open Network and Sharing Center';




3. Click **'Change adapter Setting'** on top left corner;



4. Click **'Local Internet'**;

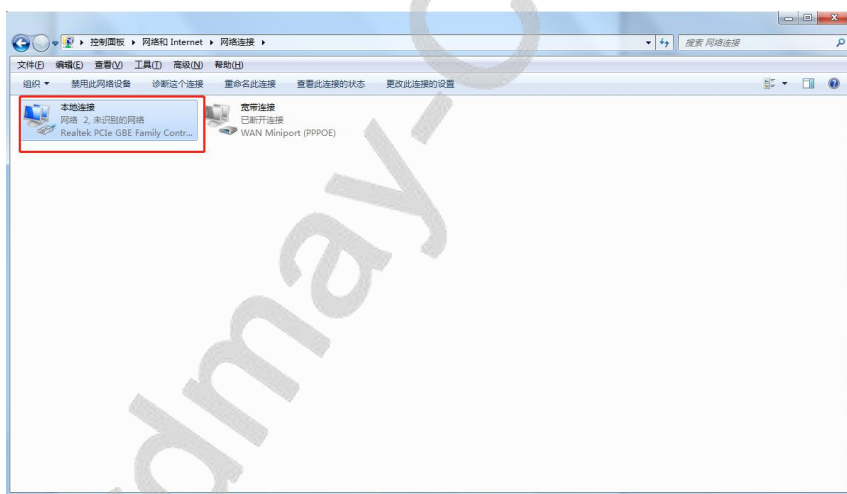


5. Click the right mouse button, click **'Properties'**;

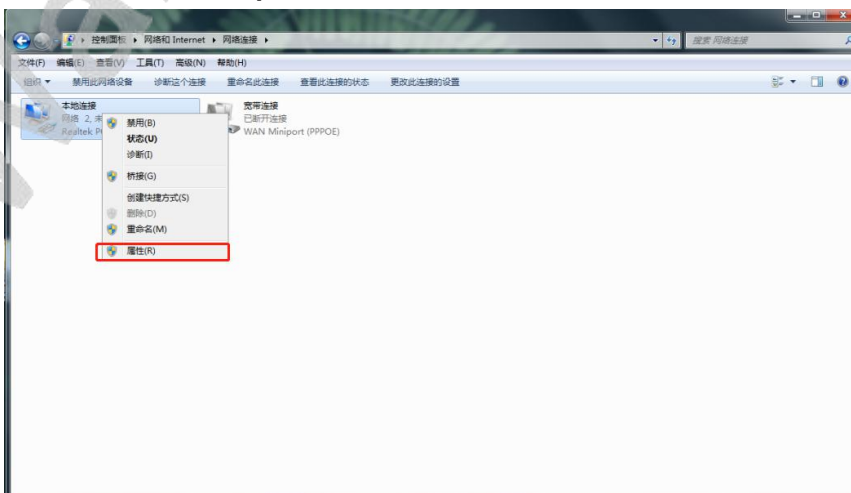

6. Enter local network properties network settings, double click 'ICP/IPV4';



7. Enter IP Address Setting, this is the IP Address your computer is using, it is a **192.168.198.105**. Kindly click 'Advanced Options'; Enter IP Setting;

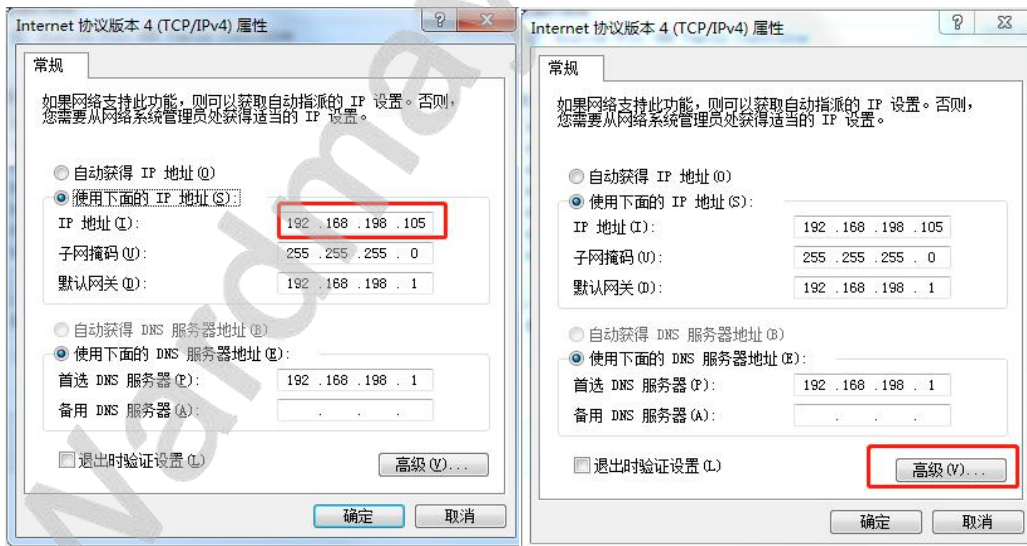

8. Enter IP Setting, click 'ADD', input IP Address **192.168.1.\*\*\***. Then Click 'OK';



9. On default Gateway. Go on click 'ADD', input IP Address **192.168.1.1**. Note: The last number is '**1**'. Then click 'OK';



10. Click 'OK' to finish all setting, go on add '**0**' gateway, repeat steps of **8 and 9**, and it can finish to add **192.168.0.\*\*\***.